



Garmin Nüvi 370 LCD Display Replacement

This step by step guide will show you how to disassemble your Garmin Nüvi 370 in order to access and replace the LCD display.

Written By: Matt West



INTRODUCTION

In this guide the repairer replaces the LCD display of the device by carefully prying apart the components with one's hands.

Prerequisite Guide:

[Disassembling Garmin Nuvi 370 Into Core Components](#)

Tools Used:

- None

Estimated Duration: 5 minutes

Step 1 — LCD Display



- After following the instructions in the [main dis-assembly guide](#), you should have the screen detached from the motherboard.

Step 2



- Hold the front panel plastic and screen as shown.
- Gently apply pressure on the left and top left corner to allow the screen to come out of the plastic shell.

Step 3



- Once the top-left corner is out, carefully start detaching the bottom of the screen, starting from the bottom left.

Step 4



- Finally, gently pull the screen out of the right side of the plastic shell.

Step 5



- The screen should now be completely detached.
- Insert new, functional display screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 01:24:53 PM.